

TPM-CT-E(SDM630MCT-MA) Three-phase Smart Meter Quick Guide


1. Overview

SDM630MCT-MA is a multi-function rail meter, it can accurately measure and display various power parameters in 1P2W/3P3W/3P4W: voltage, current, power, frequency, active power, forward power, reverse power, total harmonics, etc. The meter is suitable for real-time power monitoring system, with multi-function, multi-purpose, high stability and long life characteristics. The meter is connected with an external current transformer and is suitable for various high and low voltage power grids. The meter has RS485 communication interface, supports the highest communication rate of 38400bps, can realize remote communication.

2. Technical Parameters


General Specifications	
Rated voltage	3×230/400Vac
Rated frequency	50/60Hz
L-N voltage range	100 ~ 289Vac
L-L voltage range	173 ~ 480Vac
Auxiliary power voltage range	85 ~ 275Vac or 120 ~ 380Vdc
AC withstand voltage	4KV for 1min
Input current range	<40mA
Short-term overcurrent	20*IMAX for 0.5s
Max. Reading	9999999.9kWh/kVArh
Accuracy	
Active power	0.5% of range maximum
Reactive power	1% of range maximum
Environment	
Rated temperature	-25°C ~ +55°C
Limit temperature	-40°C ~ +70°C
Relative humidity(average annual)	≤90%
Installation category	CAT III
Degree of pollution	Conform to RoHS
Communication	
Communication	RS485 output for Modbus RTU
Baud rate	9600bps(default)
Pulse	3200imp/kWh
Mechanics	
Mounting dimensions	94.5x72x65mm(LxWxH)
Din rail dimensions	DIN rail 35mm
Protection level	IP51 (indoor)

3. Unpacking


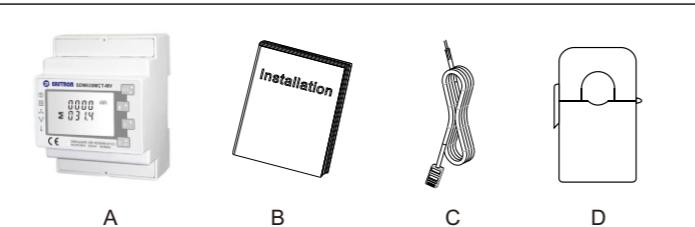


Item	Quantity	Description
A	1	Three-phase meter
B	1	User Manual
C	1	RS485 cable (standard length 15m)
D	3	Current Transformer

4. Dimension(Unit:mm)

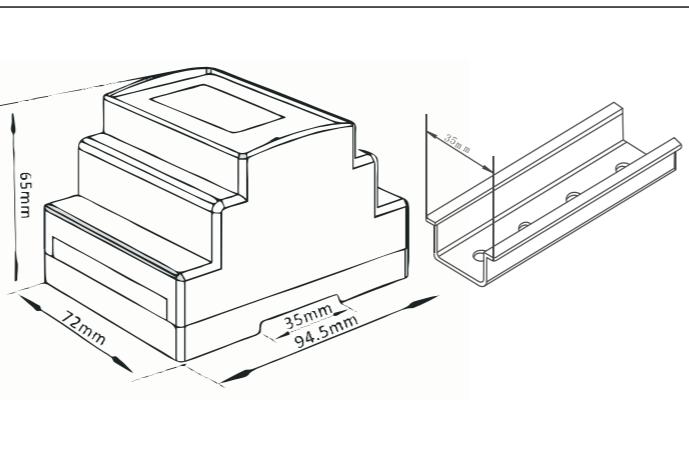

5. Installation

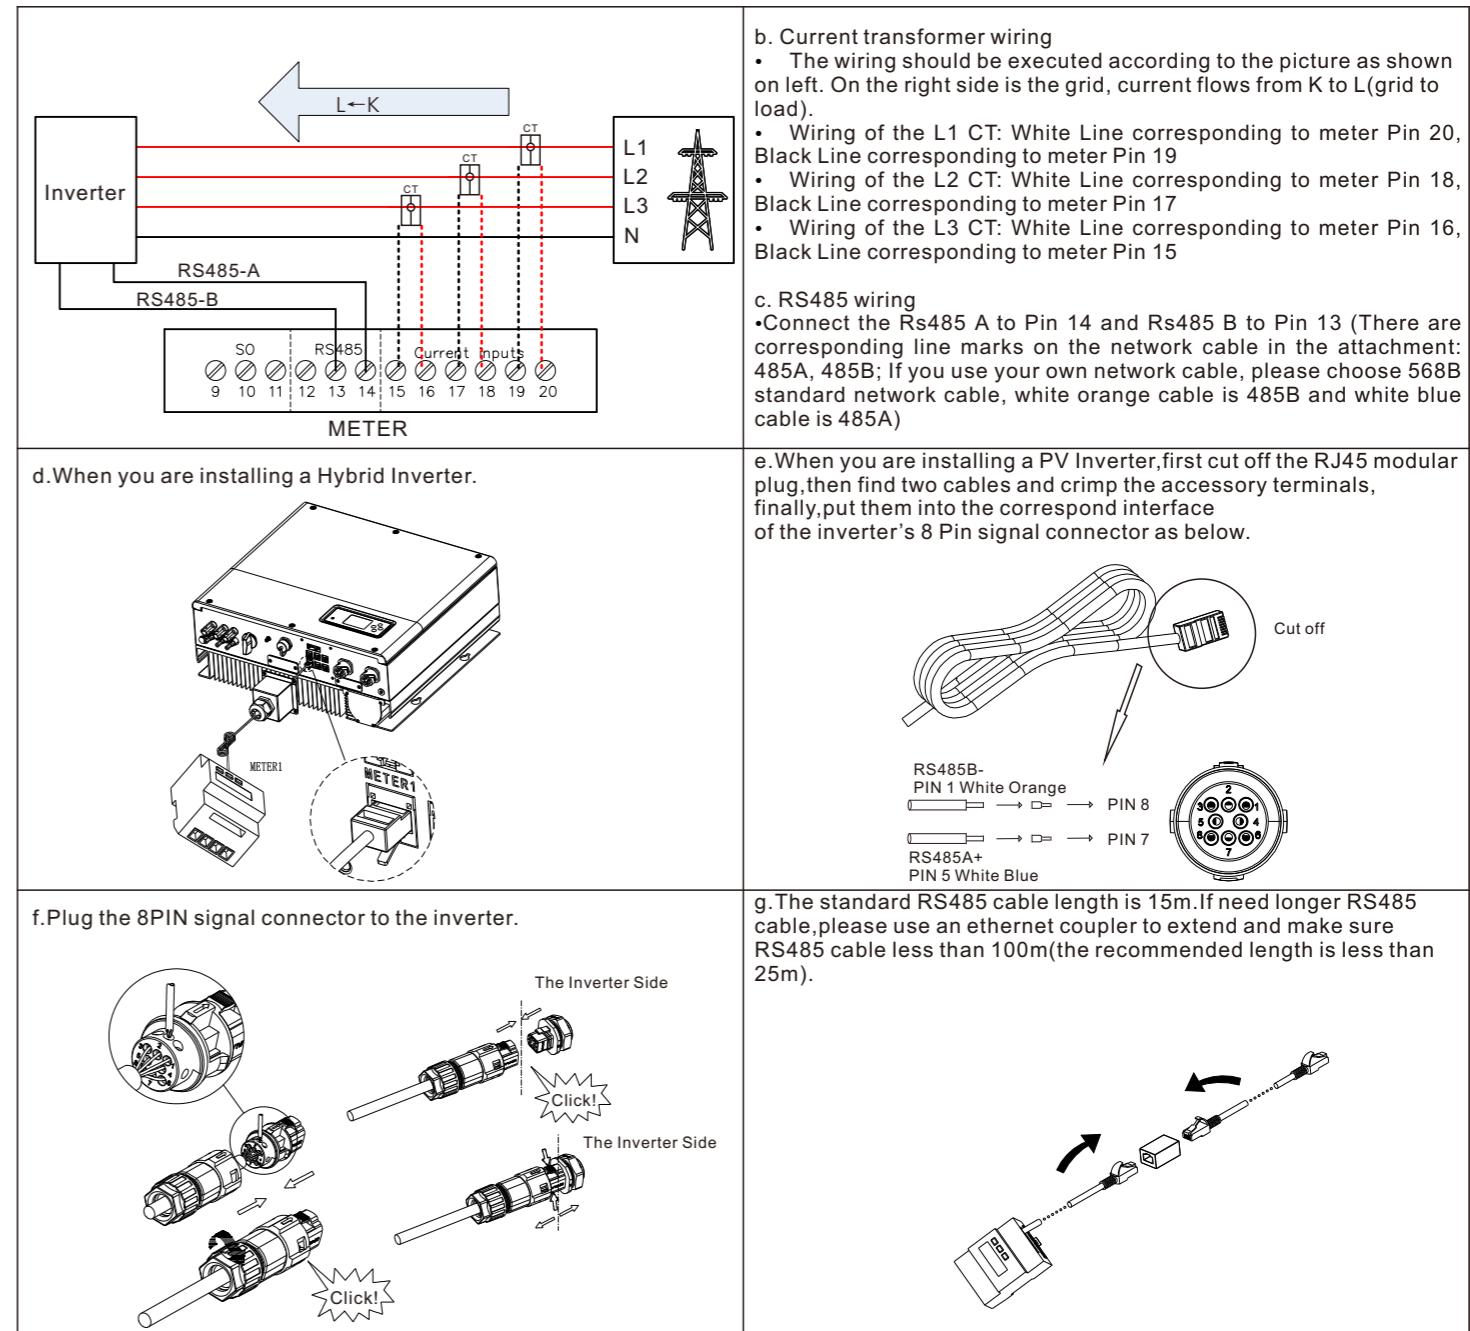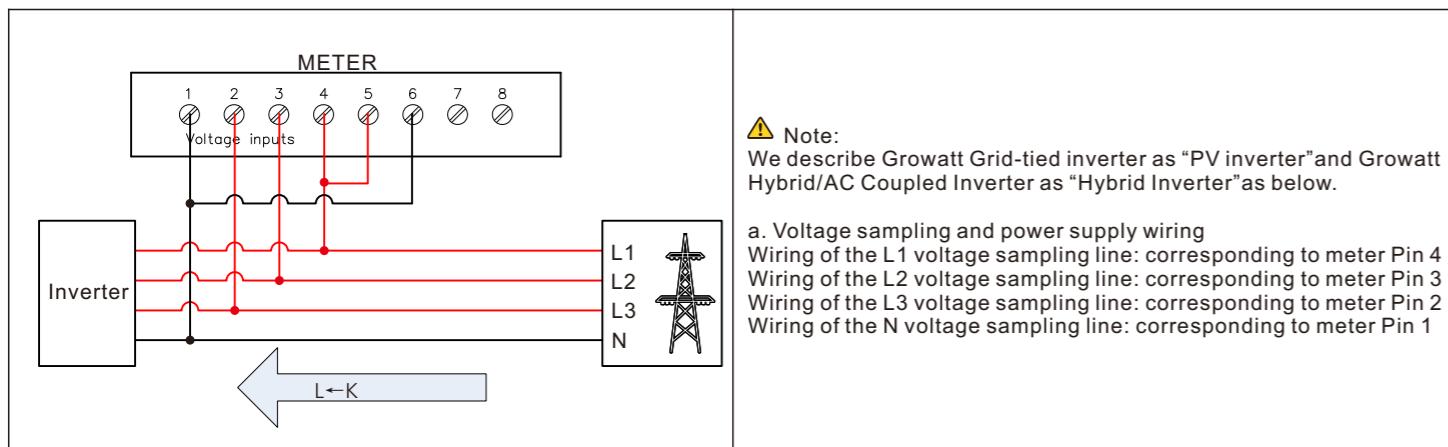


6. Button Definition And Display


There are four touch buttons on the panel, from top to bottom are "ESC(←)V/A", "↑ (Alt)MD/PH/HZ", "↓ (Shift)P", "ENTER(→)E". There are two types of key operation: long press(Press for more than two seconds) and short press(Pressing time is less than one second).

NO.	Button	Features	Viewable content(short press)
1		Short press: display voltage and current, ← Long press: ESC	Phase voltage, Line voltage, Phase current, Neutral current, Voltage harmonics, Current harmonics
2		Short press: display power factor and frequency, ↑ Long press: Alt	Phase(Total) frequency, Total power factor, Phase(Total) maximum current demand
3		Short press: display power, ↓ Long press: Shift	Phase(Total) active power, Phase(Total) reactive power, Phase(Total) apparent power
4		Short press: display electric energy, → Long press: Enter	Total active electric energy, Total reactive electric energy, Forward active electric energy, Reverse active electric energy, Forward reactive electric energy, Reverse reactive electric energy

Note: This meter and SPH default communication address is 02, the baud rate is 9600, the current ratio is 150A/40mA, if the meter and SPH communication is not on, you can confirm the communication address and baud rate is accurate. Long press  to enter setting menu(default password is 1000), then use  and  to find the page to be set. If the page flashes, means it can be set through  and  to enter. When you set OK, long press  to confirm and then press  to exit setting.

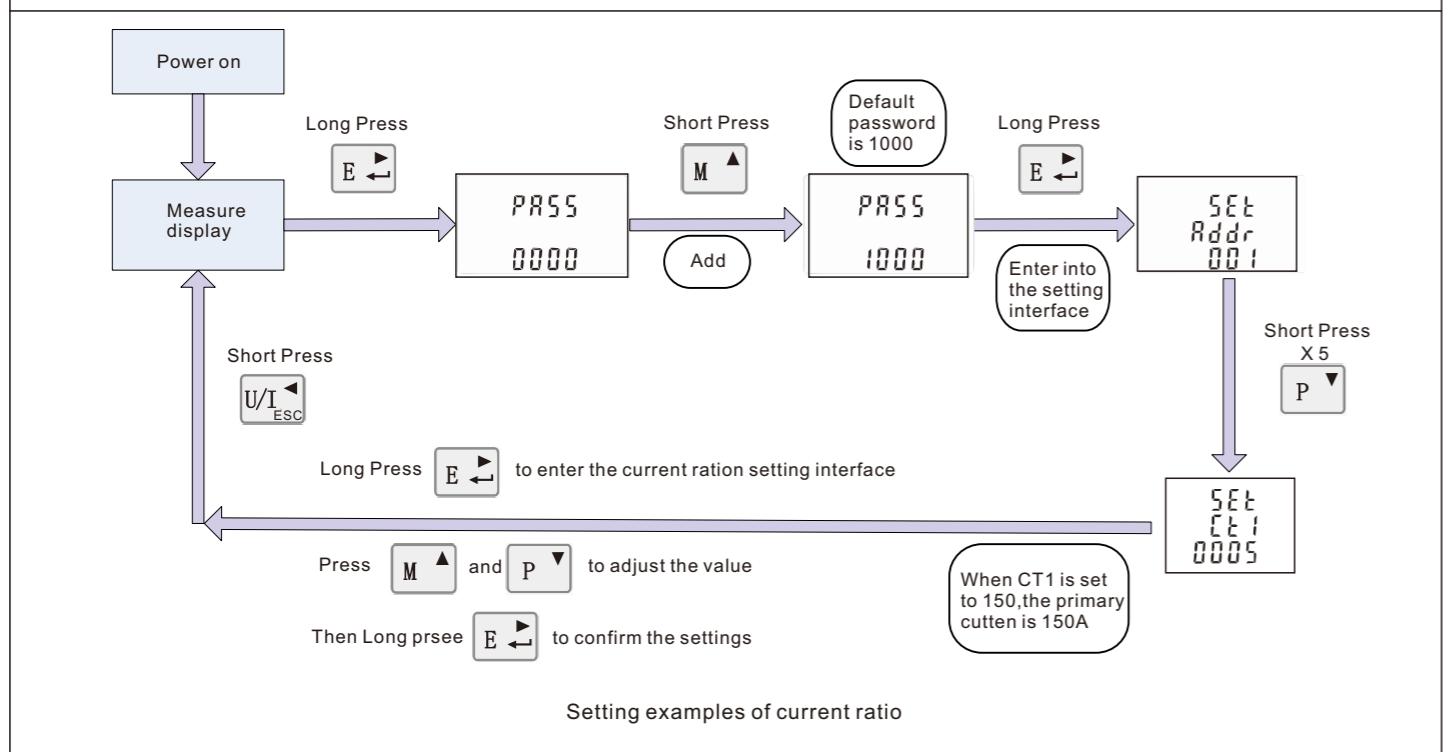

The complete system wiring diagram is as follows, if the meter is not operating normally, you can refer to it to check the wiring.EPS port is only available in hybrid inverter.

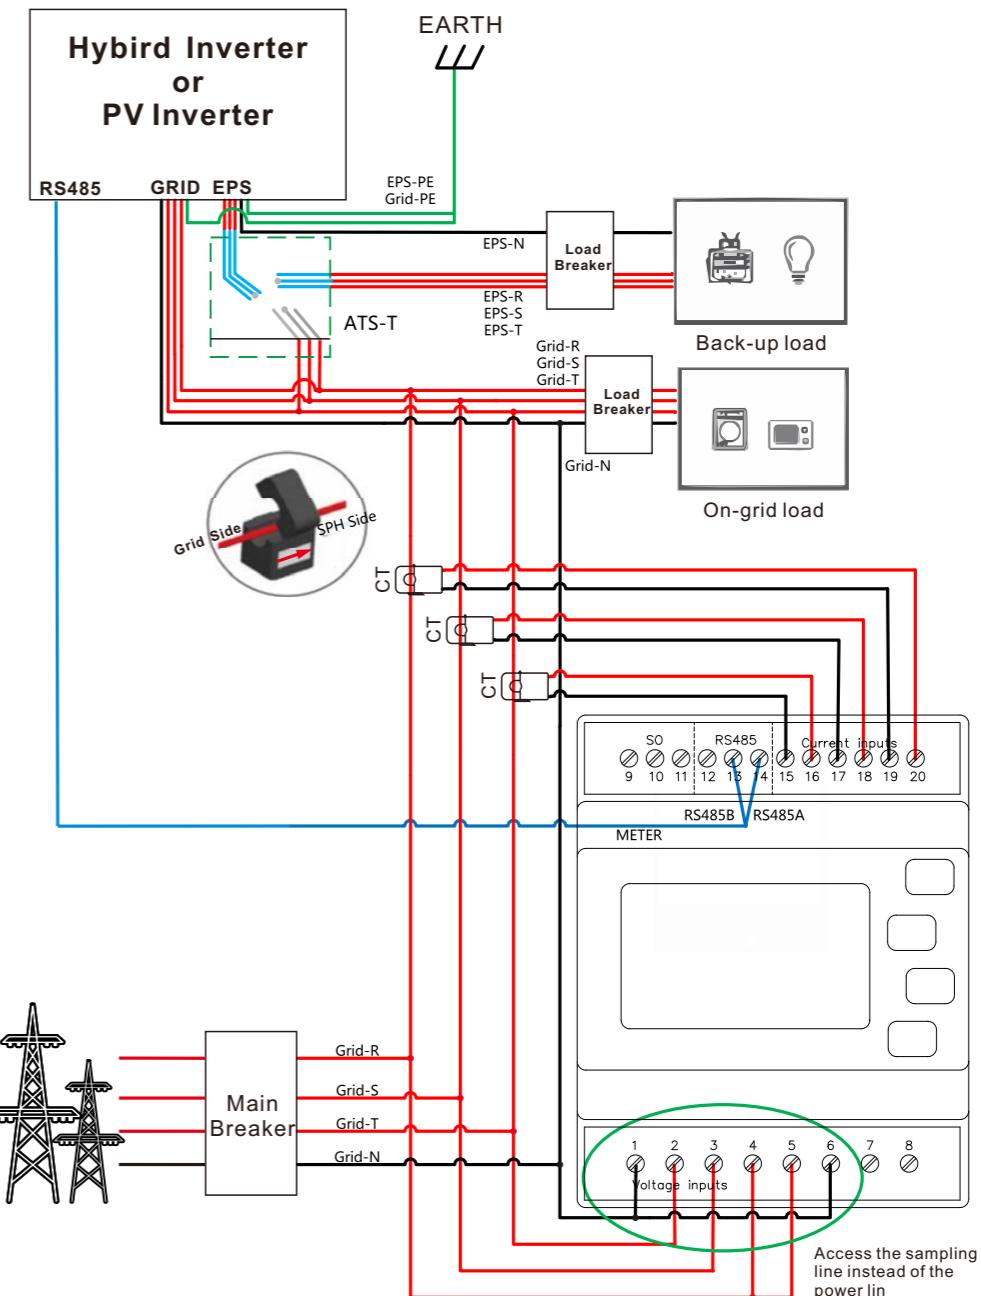

7. Trouble Shooting

Fault phenomenon	Reason analysis	Solution
Big deviation between electric energy measurement and actual value.	1. Wiring error, voltage and current corresponding phase sequence is wrong. 2. If the output line of the current transformers is reversed. 3. The transformer ratio is not set, the meter displays the secondary data.	1. Refer to the wiring diagram to check the wiring. 2. If the transformer ratio setting is wrong, please set the voltage ratio and current ratio correctly. 3. If the issue still exists,please contact your local supplier.
RS485 communication error (Inverter error 401)	1. RS485 cable is open circuit,short circuit or resersely. 2. The address, baud rate and data parity of the meter do not match the SPH.	1. If there is a problem with the communication cable, please replace the communication cable. 2. Set the correct address, baud rate, and data bit check digit of the meter by the button. 3. If the issue still exists,please contact your local supplier.

